SONY Quick Start Guide
DSLR-A330/A380

α330 α380

Preparation

The battery pack

1 Charge the battery pack until the CHARGE lamp lights off.

For customers in the U.S.A. and Canada

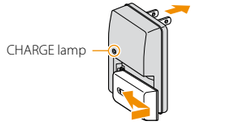

For customers in countries/regions other than the U.S.A. and Canada



2 Insert the battery pack into the camera.

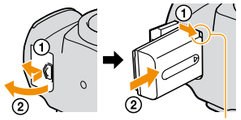

Firmly insert the battery pack all the way while pressing the lock lever with the tip of the battery.

The lens

1 Remove the body cap on the camera and packaging lid on the rear of the lens.



- Do not touch inside parts.
- If dust enters the camera, it may appear on the photo image. Do not leave the camera and lens without the caps. When you change the lens, do it quickly in a location free from dust.

2 Mount the lens by aligning the index marks as illustrated.

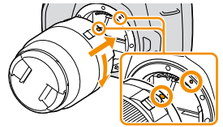

- Turn the lens until it clicks.
- Remove the lens cap during shooting.

The memory card

1 Open the memory card cover.



2 Insert a memory card and select the type of the memory card you want to use using the memory card switch.
Face side (SD memory card)

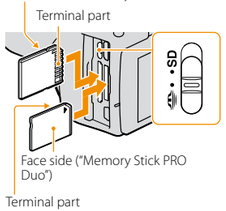

- When inserting a memory card, turn the camera off.
- For available memory cards, refer to the Instruction Manual.

Date/time setup

1 Turn the camera on.

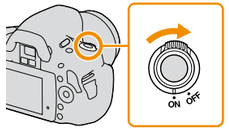

2 Set up the date/time.

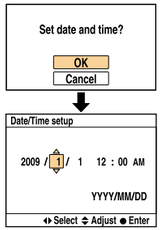

4-137-172-11 (1)

Shooting

1 Set the mode dial to AUTO.

- Check that the LIVE VIEW/OVF switch is set to "LIVE VIEW."

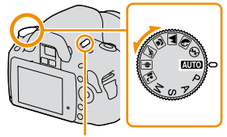

2 Check the subject on the LCD monitor.

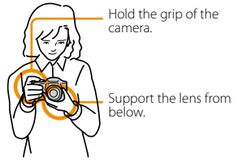

3 Press the shutter button halfway down to focus.

- Pressing the shutter button halfway down and holding it activates the autofocus.

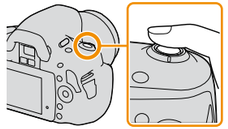

4 Press the shutter button fully down to shoot.

Playback

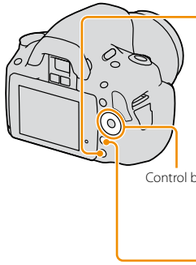

Press ▶.

To play back a previous or next image: press ◀/▶ on the control button.

To return to the shooting mode: ▶

To delete the image

Press 🗑.

To fully enjoy the features of your single lens reflex camera, consult the "Instruction Manual."

© 2009 Sony Corporation Printed in Japan

4137172110